

Safe Box User Instructions

How To Set and Change Your Personal Pin Code

- Open the electronic safe door and press the red “reset” button located behind the safe door (bottom left corner of the battery box), the yellow light will come on when you press the button.
- Enter a 1-8 digit code, press the ‘E’ key, listen for the the beeps.
- Now the code is set and stored in the memory. When you re-enter the same code while the safe is closed, the door will open.

How To Set and Change The Master Code

- Press 0 twice, while the safe door is open
- Press the reset button at the bottom left corner of the battery box (The red button located on the inside of the safe door by the hinges) the yellow light flashes
- Then enter a 1-8 code and press ‘E’ key. Listen for the beeps.
- The master code is set and stored in memory. Master code and user code can be used simultaneously.

How To Open The Safe

- Enter the code and the yellow light flashes and the lock beeps once for each digit.
- After entering the code press the ‘E’ key, the green light flashes. Rotate the handle clockwise to open the safe door
- If you make an incorrect entry, you will hear 5 beeps.
- After 3 incorrect entries the system locks itself and dial pad will not work for 20 seconds. Then if you make another 3 incorrect entries the system locks itself and dial pad will not work for 5 minutes.

How to Close the Safe

- Close the safe door and rotate the handle anti-clockwise.

Emergencies

- If you forget the code, use the emergency key and press the red button to set a new code.
- If both the green and red lights flash it when you open the safe it means battery is low and you must change the batteries. When you replace the batteries the previous code and the master code will be valid.

Please test the safe box with the new the batteries while the safe door is open.

KARARGÂH